

How to Install the Ceramic Heater Core into the Airless Plastic Welder Element



Step 1



Remove the large nut at the base of the barrel and slide the barrel off of the assembly.

Step 2



The tip adapter, sleeve, and spacer slide off.

Step 3



Remove the 3 screws that hold the base plate to the handle and slide the handle away from the ceramic core assembly.

Step 4



Unplug the green ground wire from the grounding spring.

Step 5



Push the locking lever to unhook the ceramic heater core and unplug the ceramic heater core from the power lines.

To reassemble, reverse these steps.